



DAIKIN APPLIED EUROPE S.p.A.

BAS Integration guide

BACnet[®] protocol

Doc. Name:

D-EIGOC00106-26_00EN

Product Name:

Modular Light (ALB)

Control software name:

EvoLVE



Table of contents

- 1. Introduction 3
- 2. About this document 4
 - 2.1 Notice 4
 - 2.2 Before starting 4
- 3. Safety information 5
- 4. Commission this unit in a BACnet network 6
 - 4.1 General information 6
 - 4.2 BACnet IP module (POL908).....7
 - 4.3 BACnet MS/TP module (POL904.00/STD).....8
- 5. BACnet integration list 10
 - 4.3.1 Analog Input 10
 - 4.3.2 Analog Output 10
 - 4.3.3 Analog Values 11
 - 4.3.4 Binary Inputs 12
 - 4.3.5 Binary Outputs 12
 - 4.3.6 Schedule 12
 - 4.3.7 Multistate Outputs 12
 - 4.3.8 Multistate Value 13
- 6. Annex 1 – iTM Installation & Configuration 15
- 7. Annex 2 – EDE files for BACnet 19
- 8. Annex 3 - Microtech III PICS for BACnet 21
 - 4.4 BACnet standardized device profile21
 - 4.5 BACnet interoperability building blocks supported21
 - 4.6 BACnet standard object types supported22
 - 4.7 BACnet standard object types description.....22



1. Introduction

This document contains information to incorporate a MicroTech® III and Microtech 4 Unit Controllers into a building automation system (BAS) via BACnet® communication protocol.

Microtech III and Microtech 4 are suitable for network integration. Data points accessible from a BACnet network are made available to a BAS provided that the proper communication modules are installed/activated.

Communication settings and the BACnet® properties with corresponding controller data points are described. BACnet® terms are not defined. Refer to the respective specifications for definitions and details.



2. About this document

2.1 Notice

© 2014 Daikin Applied Europe, Cecchina, Roma. All rights reserved throughout the world TM [®] The following are trademarks or registered trademarks of their respective companies:

- **BACnet** from American Society of Heating, Refrigerating and Air-Conditioning Engineers,
- **MicroTech III** from Daikin Applied Europe.
- **MicroTech 4** from Daikin Applied Europe.

2.2 Before starting

| | |
|--------------------------|--|
| Application range | This document refers to the following components: Microtech III Controller Microtech IV Controller POL908.00/STD BACnet IP module POL904.00/STD BACnet MS/TP module |
| Users | Users of this document are intended to be: <ul style="list-style-type: none"> - BACnet systems integrators - Service Technicians - Plant Engineers - Sales staff |
| Conventions | Microtech III e Microtech 4 further in this document and when proper will be referred to as Microtech. |
| Abbreviation | BACne B uilding A utomation and C ontrol N etwork BSP B oard S upport P ackage (operating system) |
| References | ANSI/ ASHRAE 135-2004. "BACnet - A Data Communication Protocol for Building Automation and Control Networks". American Society of Heating, Refrigerating and Air-Conditioning Engineers - www.ashrae.org. • Siemens Building Technologies - CB1P3933en - BACnet communication modules |



3. Safety information

Only personnel qualified in accordance with IEC (International Electrotechnical Commission) recommendations may be permitted access to electrical components. It is particularly recommended that all sources of electricity to the unit be shut off before any work is begun. Shut off main power supply at the main circuit breaker or isolator.

IMPORTANT: This equipment uses and emits electromagnetic signals. Tests have shown that the equipment conforms to all applicable codes with respect to electromagnetic compatibility.



RISK OF ELECTROCUTION: Even when the main circuit breaker or isolator is switched off, certain circuits may still be energized, since they may be connected to a separate power source.





RISK OF BURNS: Electrical currents cause components to get hot either temporarily or permanently. Handle power cable, electrical cables and conduits, terminal box covers and motor frames with great care.

| | | |
|--------------------------------------|--|--|
| Field of application | | Use BACnet communication modules only for control and monitoring functions in ventilation, air conditioning and refrigeration plants. |
| Intended use | | Trouble-free and safe product operation of the above products presupposes transport, storage, mounting, installation, and commissioning as intended as well as careful operation. |
| Electrical installation | | Fuses, switches, wiring and grounding must comply with local safety regulations for electrical installations. |
| Wiring | | When wiring, strictly separate AC 230 V mains voltage from AC 24 V safety extralow voltage (SELV) to protect against electrical shock! |
| Commissioning and maintenance | | Only qualified staff trained accordingly may prepare for use, commission, and maintain BACnet communication modules. Maintenance of BACnet communication modules generally only means regular cleaning. We recommend removing dust and dirt from system components installed in the control panels during standard service. |
| Faults | | Only authorized staff may diagnose and correct faults and recommission the plant. This applies to working within the panel as well (e.g. testing or changing fuses). |
| Storage and transport | | Refer to the environmental conditions specified in the respective data sheets for storage and transport. If in doubt, contact your supplier. |
| Disposal | | Devices contain electrical and electronic components; do not dispose of them in household garbage. Observe all local and applicable laws. |



4. Commission this unit in a BACnet network


4.1 General information
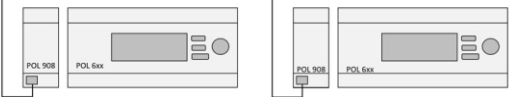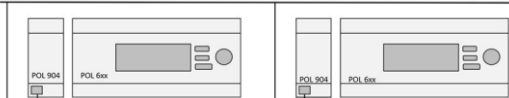
| | |
|---|--|
| Compatibility | The Microtech controllers are tested according to the BACnet Testing Laboratory (BTL) Test Plan. They are designed to meet the requirements of the BACnet Standard as stated in the Protocol Implementation and Conformance Statement (PICS). However, they are not BTL listed. The PICS is located at the end of the present document. |
| Unit controller is a Microtech III or a POL638 | Microtech III controller can be integrated in an interoperable BACnet network provided that it is equipped with the proper communication module. See "Communication modules" section below in this page. |
| Unit controller is a Microtech 4 | Microtech 4 controller can be integrated in an interoperable BACnet network provided that it is equipped with the proper communication module. See "Communication modules" section below in this page. |
| Communication modules | Available communication modules to configure Microtech controllers in BACnet network are: <ol style="list-style-type: none"> 1. BACnet/IP (dedicated network or shared Ethernet LAN) 2. BACnet MS/TP (Master/Slave Token Passing). Both communication modules comply with the standardized profile for BACnet equipment (B-AAC BACnet Advanced Application Controller). |
| BACnet/IP (POL908) | <p style="text-align: center;">BACnet / IP</p>  |
| BACnet MS/TP (POL904) | <p style="text-align: center;">BACnet MS/TP (RS485)</p>  |



4.2 BACnet IP module (POL908)

Module description

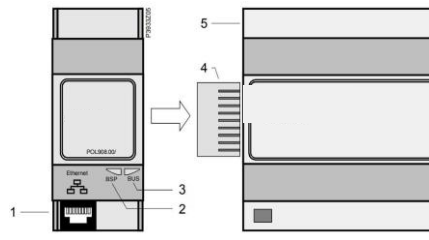

| Part | Description |
|------|---|
| 1 | Ethernet interface 10/100 Mbit (IEEE 802.3U), RJ45 plug, 8-pin. |
| 2 | Status display "BSP" (Board Support Package). |
| 3 | Status display "BUS" (bus connections / bus traffic o.k.). |
| 4 | Plug connection "Communication extension bus". |
| 5 | Microtech III controller. |

BSP Led

| Color | Flashing frequency | Meaning |
|------------|--|--|
| Green | Steady on | BSP operating and communication with controller working. |
| Yellow | Steady on | BSP operating, but no communication with controller. |
| Red | Steady on | Hardware fault. |
| Red/Yellow | Flashing at 1 Hz (1 second on/ 1 second off) | Upgrade mode running. |
| Red | Flashing at 2 Hz (0,5 second on/ 0,5 second off) | BSP error (software error). |

BUS Led

| Color | Flashing frequency | Meaning |
|--------|--------------------|----------------------------|
| Green | Steady on | Communication active. |
| Yellow | Steady on | Initializing |
| Red | Steady on | Communication interrupted. |

Module connection

| Step | Action |
|------|---|
| 1 | Power off the controller |
| 2 | Connect POL908 module to the controller via plug connection (part 4). |
| 3 | Connect the TCP/IP bus cable to the POL908. |
| 4 | Power on the controller |

Configuration

| Step | Action |
|------|--|
| 1 | Check that BUS led status is steady on green coloured. |
| 2 | Navigate the unit's keypad/display to the main menu page and set the "service" password |
| 3 | Navigate the unit's keypad/display following the path below: Main menu→Commissioning→BACNet/IP Setup |
| 4 | Set parameters in the table below as needed according to the local network |


| Parameter | Default value |
|------------------------------------|-----------------|
| Device Instance | 1 |
| UDP Port Number | 47808 (BAC0) |
| DHCP ⁽¹⁾ | OFF |
| Given IP Address ² | 127.0.0.1 |
| Given IP Subnet Mask ² | 255.255.255.000 |
| Given Gateway Address ² | 127.0.0.1 |
| Unit Support | English |
| NC Dev 1 | 0 |
| NC Dev 2 | 0 |



- (1) Verify whether DHCP should or should not be enabled. If not, obtain the IP Subnet Mask of the shared network from the network administrator. Then, obtain static IP Addresses for all MicroTech III Unit Controllers you are integrating into the shared network. Finally, obtain the address of an IP Router to use for sending IP messages to and from the BACnet IP subnets.
- (2) These addresses are used if DHCP (Dynamic Host Configuration Property) is set to Off. For changes to these parameters to take effect, use the keypad/display and set Apply Changes on the BACnet IP Setup menu to Yes. This will cause the power on the unit controller to reset.
- (3)

4.3 BACnet MS/TP module (POL904.00/STD)

Module description

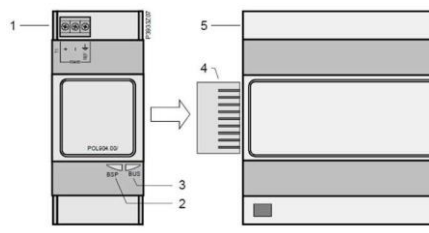

| Part | Description |
|------|---|
| 1 | Interface RS485, plug-in terminals with screw/terminal connections. |
| 2 | Status display "BSP" (Board Support Package). |
| 3 | Status display "BUS" (bus connections / bus traffic o.k.). |
| 4 | Plug connection "Communication extension bus". |
| 5 | Microtech III controller. |

BSP Led

| Color | Flashing frequency | Meaning |
|------------|--|--|
| Green | Steady on | BSP operating and communication with controller working. |
| Yellow | Steady on | BSP operating, but no communication with controller. |
| Red | Steady on | Hardware fault. |
| Red/Yellow | Flashing at 1 Hz (1 second on/ 1 second off) | Upgrade mode running. |
| Red | Flashing at 2 Hz (0,5 second on/ 0,5 second off) | BSP error (software error). |

BUS Led

| Color | Flashing frequency | Meaning |
|--------|--------------------|----------------------------|
| Green | Steady on | Communication active. |
| Yellow | Steady on | Initializing |
| Red | Steady on | Communication interrupted. |

Module connection

| Step | Action |
|------|---|
| 1 | Power off the controller |
| 2 | Connect POL904 module to the controller via plug connection (part 4). |
| 3 | Connect the TCP/IP bus cable to the POL908. |
| 4 | Power on the controller |

Configuration procedure

| Step | Action |
|------|--|
| 1 | Check that BUS led status is steady on green coloured. |
| 2 | Navigate the unit's keypad/display to the main menu page and set the "service" password |
| 3 | Navigate the unit's keypad/display following the path below: Main menu Commissioning BACnetMSTP Setup |
| 4 | Set parameters in the table below as needed according to the local network |



Configuration parameters

| Parameter | Default value | Notes | |
|-----------------|---------------|---|-----------------------|
| Device Instance | variable | The last 8 digits are computed from the production number and date code. | |
| MSTP Address | 24 (0x18) | Cycle power after changing it for the changes to take effect. | |
| Baud Rate | 38400 | Baud rate | Baud Rate |
| | | 76800 | 64 |
| | | 38400 | 32 |
| | | 19200 and lower | Value not recommended |
| Max Master | 127 | Recommended value is the number of MS/TP devices (device address) + 1 | |
| Max Info Frames | 1 | 1, unless device generates high-priority events (alarm, COV, client functionality). | |
| Unit Support | English | | |



5. BACnet integration list

The following tables contains the complete list of BACnet data points properties available from the AHU Unit Controller. Different BACnet objects combination will be available based on different AHU configurations.



Improper use of the following data and set points can lead to unwanted or unexpected behavior of the unit.

Tables listed in this section are divided according to the particular BACnet Object Type.

4.3.1 Analog Input

| Object Name | Object Instance | Object Description | Dimension | Read/Write |
|--------------|-----------------|--------------------------------|-------------------|------------|
| SupplyTmp | 45150 | Supply air temperature | °C | R |
| RmUTmp1 | 33923 | Room unit temperature | °C | R |
| ReturnAirTmp | 28256 | Return air temperature | °C | R |
| OutTmp | 53218 | Outside air temperature | °C | R |
| PreHeatTemp | 29568 | Pre-Heating temperature | °C | R |
| ExhaustTmp | 40895 | Exhaust temperature | °C | R |
| SupplyPrs | 20400 | Supply air pressure | Pa | R |
| ReturnPrs | 39576 | Return air pressure | Pa | R |
| SupplyFlow | 9497 | Supply air flow | m ³ /h | R |
| ReturnFlow | 38593 | Return air flow | m ³ /h | R |
| RoomHum | 37799 | Room humidity relative | %rH | R |
| AirQuality | 3737 | Air quality (CO ₂) | ppm | R |

4.3.2 Analog Output

| Object Name | Object Instance | Object Description | Dimension | Read/Write |
|------------------|-----------------|--|-----------|------------|
| SplyFanVarPos | 59037 | Supply fan output | % | R |
| ExhFanVarPos | 40119 | Return fan output | % | R |
| ElectricalHtgPos | 37442 | Electrical heating / Post heating output | % | R |
| HrecPos | 5922 | Recovery device output | % | R |
| CoolingPos | 30925 | Cooling coil output | % | R |
| HeatingPos | 26209 | Heating coil output | % | R |
| FanTempCompPos | 62755 | Fan temperature compensation output | % | R |



4.3.3 Analog Values

| Object Name | Object instance | Object Description | Dimension | Read/Write |
|------------------------------|-----------------|---|-------------------------|------------|
| SplyFanSpvSt1Spv | 52572 | Supply fan setpoint | m ³ /h or Pa | R/W |
| SplyFanSpvEcSpv | 57915 | Supply fan economy setpoint | m ³ /h or Pa | R/W |
| SplyFanSpvMaxForce | 25092 | Supply fan max force | m ³ /h or Pa | R/W |
| ExhFanSpvSt1Spv | 45030 | Return fan setpoint | m ³ /h or Pa | R/W |
| ExhFanSpvEcSpv | 6118 | Return fan economy setpoint | m ³ /h or Pa | R/W |
| ExhFanSpvMaxForce | 2525 | Return fan max force | m ³ /h or Pa | R/W |
| SplyFanActVal | 56628 | Supply fan actual value | m ³ /h or Pa | R |
| ExhFanActVal | 59694 | Return fan actual value | m ³ /h or Pa | R |
| SplyFanActSpv | 46589 | Supply fan actual setpoint | m ³ /h or Pa | R |
| ExhFanActSpv | 33255 | Return fan actual setpoint | m ³ /h or Pa | R |
| AirQSpv | 22649 | Air quality setpoint | ppm | R/W |
| TmpSpvEcSpvClg | 61866 | Economy cooling setpoint | °C | R/W |
| TmpSpvEcSpvHtg | 35713 | Economy heating setpoint | °C | R/W |
| ActMainSpvHtg | 4018 | Actual heating setpoint (depending on actual control mode) | °C | R |
| ActMainSpvClg | 30105 | Actual cooling setpoint (depending on actual control mode) | °C | R |
| ActMainSpvClg | 30105 | Actual cooling setpoint (depending on actual control mode) | °C | R |
| ActTempSetpt | 56276 | Active temperature setpoint | °C | R |
| ActCtrlVal | 52988 | Actual controlled temperature | °C | R |
| HumSpvRelSpvDehum | 11342 | Dehumidification setpoint relative | %rH | R/W |
| HumSpvRelSpvHum | 10627 | Humidification setpoint relative | %rH | R/W |
| ActMainSpvHum | 40393 | Actual humidification setpoint relative | %rH | R |
| ActMainSpvDeh | 47998 | Actual dehumidification setpoint relative | %rH | R |
| RmEnth | 61369 | Room enthalpy | kJ/kg | R |
| RmHumAbs | 17315 | Room humidity absolute | g/kg | R |
| ActCtrlValHum | 38385 | Actual controlled humidity | %rH | R |
| SuWiSwchCheckOutTm pDampd | 24338 | Outside air temp damped | °C | R |
| RoomUnitsOccTm | 1206 | Room unit presence time | h | R/W |
| RoomUnitOffset | 8926 | Room unit temperature setpoint offset | °C | R/W |
| AirQCmpPrVal | 10236 | Air quality compensation values | % | R |



4.3.4 Binary Inputs

| Object Name | Object Instance | Object Description | State texts | Read/Write |
|---------------|-----------------|--------------------|-----------------------|------------|
| SplyFanAlm | 28757 | Supply fan alarm | 0 = OK 1 = Alarm | R |
| ExhFanAlm | 55865 | Exhaust fan alarm | 0 = OK 1 = Alarm | R |
| FireAlm | 28514 | Fire alarm | 0 = OK 1 = Alarm | R |
| FilterAlm | 13699 | Filter alarm | 0 = OK 1 = Alarm | R |
| ExtCtrl1 | 11643 | Unit Enable Switch | 0 = Standby 1 = On | R |
| EmergencyStop | 9864 | Emergency stop | 0 = Alarm 1 = OK | R |

4.3.5 Binary Outputs

| Object Name | Object Instance | Object Description | State texts | Read/Write |
|----------------------|-----------------|--------------------------|-------------------------|------------|
| DamperSplyOnOff | 6170 | Fresh air damper command | 0 = Off 1 = On | R |
| HumidityCtrlCmdOnOff | 18044 | Humidifier command | 0 = Off 1 = On | R |
| CoolingPmpCmdOnOff | 10276 | Cooling pump command | 0 = Off 1 = On | R |
| HeatingPmpCmdOnOff | 10264 | Heating pump command | 0 = Off 1 = On | R |
| AlmOutHigh | 5714 | AHU General alarm output | 0 = Normal 1 = Alarm | R |

4.3.6 Schedule

| Object Name | Object Instance | Object Description | State texts | Read/Write |
|-------------|-----------------|-----------------------------|---|------------|
| ScheduleSt | 31059 | Time scheduler actual state | 1 = Off 2 = On 3 = Ventilation 4 = Economy | R |

4.3.7 Multistate Outputs

| Object Name | Object Instance | Object Description | State texts | Read/Write |
|--------------|-----------------|---------------------|-------------------|------------|
| SplyFanCmdSt | 21928 | Supply fan command | 1 = Off 2 = On | R |
| ExhFanCmdSt | 14719 | Exhaust fan command | 1 = Off 2 = On | R |



4.3.8 Multistate Value

| Object Name | Object Instance | Object Description | State texts | Read/Write |
|--------------------|-----------------|---|--|------------|
| ActOpMode | 6080 | Actual operating mode | 1 = Off 2 = On 3 = Ventilation 4 = Economy 5 = Standby | R |
| ActOpSta | 32321 | Present unit status | 1 = N/A | R |
| | | | 2 = Fire | |
| | | | 3 = Emergency | |
| | | | 4 = Fault | |
| | | | 5 = Alarm | |
| | | | 6 = Fire damper test | |
| | | | 7 = Manual | |
| | | | 8 = Panel switch | |
| | | | 9 = Local switch | |
| | | | 10 = N/A | |
| | | | 11 = BMS | |
| | | | 12 = Scheduler | |
| | | | 13 = Occupancy | |
| | | | 14 = N/A | |
| 15 = N/A | | | | |
| 16 = N/A | | | | |
| 17 = Ready | | | | |
| AckAlmPls | 39130 | Alarm acknowledge (Note! This object is used to acknowledge all alarms in the controller) | 1 = Off 2 = On | R/W |
| SuWiSwchCheckState | 24616 | Summer Winter mode | 1 = Winter 2 = Summer | R |
| AlmCl0 | 46769 | Danger alarm (A) | 1 = Normal 2 = On | R |
| AlmCl1 | 42640 | Critical alarm (A) | 1 = Normal 2 = On | R |
| AlmCl2 | 38643 | Low alarm (B) | 1 = Normal 2 = On | R |
| AlmCl3 | 34514 | Warning alarm (C) | 1 = Normal 2 = On | R |
| NetworkCtrl | 24562 | Network source | 1 = Off 2 = On | R/W |
| SuWiNetworkChgover | 28594 | Summer/Winter orkchangeover command ^{netw} | 1 = Winter 2 = Summer | R/W |
| ExhEngUnit | 43819 | Return air engineering Unit | 1 = % 2 = Pa 3 = m ³ /h | R |
| SplyEngUnit | 54155 | Supply air engineering Unit | 1 = % 2 = Pa 3 = m ³ /h | R |



| | | | | |
|--------------------------|-------|---|--|-----|
| HumEngUnit | 13725 | Humidity engineering unit | 1 = %rH 2 = g/kg | R |
| Pre-Htg Electrical | 25214 | Pre-heating electrical command | 1 = Off 2 = Step 1 3 = Step 2 | R |
| Electrical Heating State | 41370 | Electrical heating command | 1 = Off 2 = Step 1 3 = Step 2 | R |
| SuWiChgSrc | 9493 | Set source for summer/winter changeover | 1 = Auto 2 = HMI 3 = BMS (BACnet) | R/W |
| TimeSchedSt | 12316 | Indicates time scheduler active mode | 1 = On 2 = Off 3 = Ventilation 4 = Economy | R |
| ActFanStep | 28279 | Indicates the active fan step | 1 = Off 2 = Stage 1 3 = Stage 2 4 = Stage 3 | R |
| ActCtrlMode | 28561 | Indicates mode for the regulation control | 1 = Room 2 = Exhaust 3 = Supply | R |
| OpModeTspCopyUnitPls | 33544 | When set to On, time schedule settings made in "Monday" are automatically copied into the other weekdays. | 1 = Off 2 = On | R/W |



6. Annex 1 – iTM Installation & Configuration




The following procedure is valid only for iTM software version 1.21 and later. If you have a previous version installed, please update it first by following the procedure included in iTM manual.

The D-AHU is natively compatible with the Daikin intelligent Touch Manager (iTm), which acts as a mini building management system and enables the control of various AHU setpoints through its touchscreen interface. Refer to iTM specific operating manual for additional details on the device functionality.



If the AHU is provided with a BACnet-IP communication module (POL908), it can be connected to the iTM through an Ethernet cable and remotely controlled. The following figure shows how to connect the iTM with the BACnet-IP communication module.

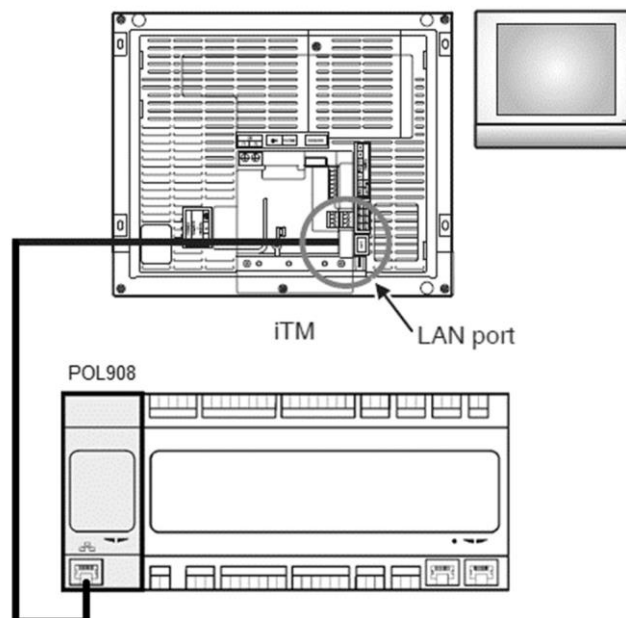

The following procedure allows the user to configure the iTM communication with the AHU controller and must be followed in order to properly set up both devices.



First configure the BACnet communication module (POL908) installed on the AHU controller. Go to the communication module configuration page located in:


HMI Path: Main Menu -> Commissioning -> Communications -> Comm modules -> #-BACnet-IP

Now configure the module as follow:

- Device ID = xx (xx must be a unique number for every AHU controller on the same network)
- DHCP = Passive
- Given IP = 192.168.0.xxx (xxx is a number between 0 & 255 and must be different from any other address in the same network)
- Given Mask = 255.255.255.0
- Write setting = Active

Restart the module using “Restart required!” item located at the end of the page. After the reboot, check if the configuration parameters above have been saved. At this point it is necessary to configure the iTM. Check network configuration settings on the iTM by following these steps.


Touch the “**Network**” button on the “**System Settings**” tab of the “**Menu List**” screen to display the Network screen.

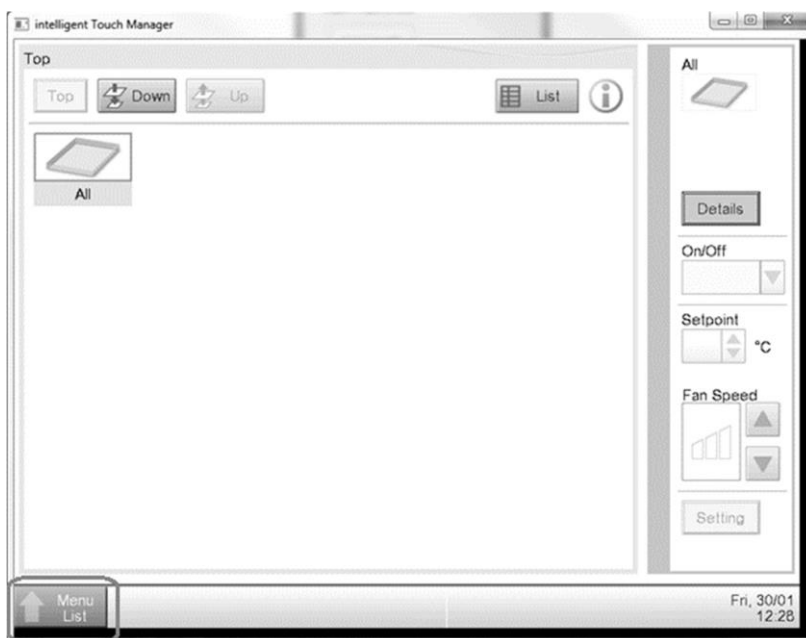




Add an AHU device by selecting “Add -> Others -> AHU”.

Modify the “BACnet Server Device Instance” number so that it matches the “Device ID” number configured on the BACnet communication module (POL908) of the controller.

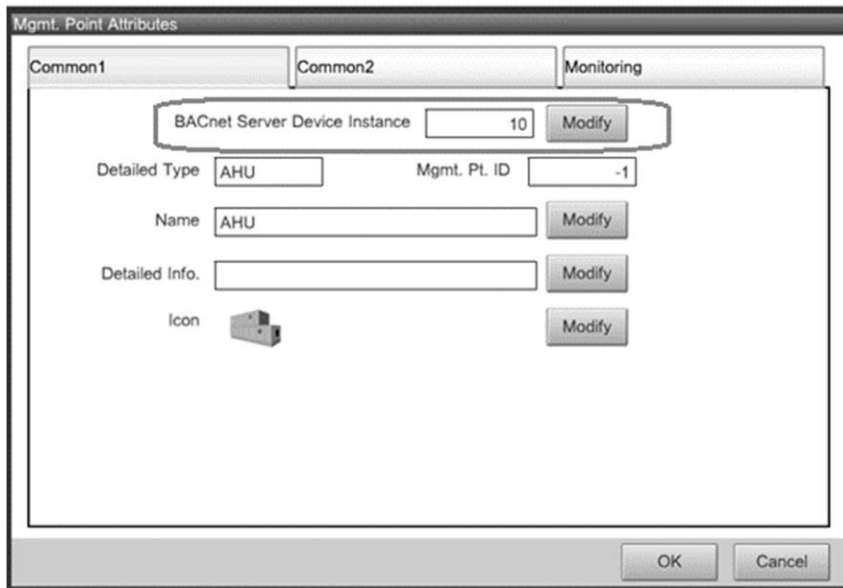







If necessary, restart the iTM. Now you can control the AHU in the iTM main screen.

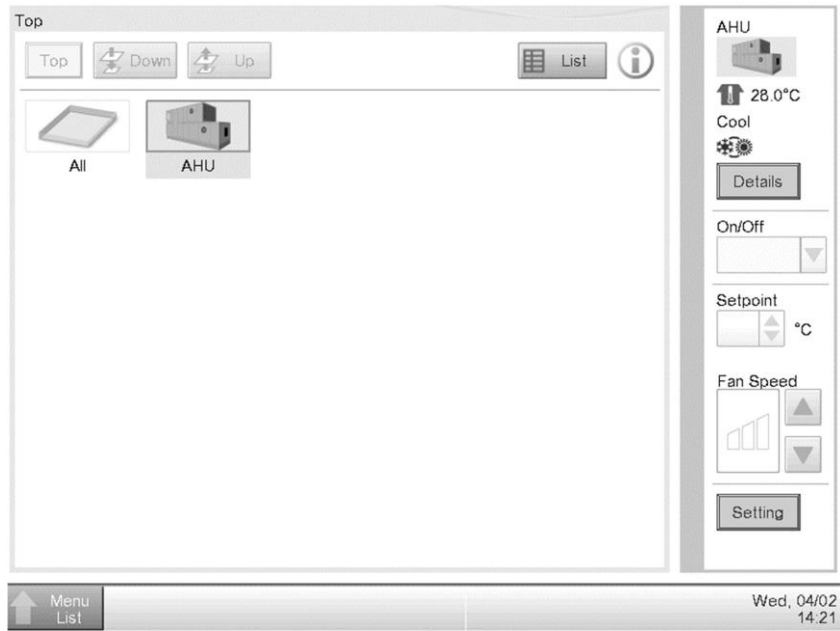



7. Annex 2 – EDE files for BACnet
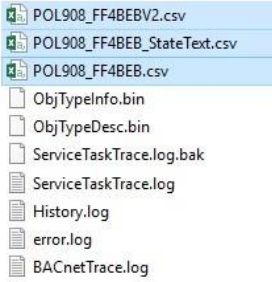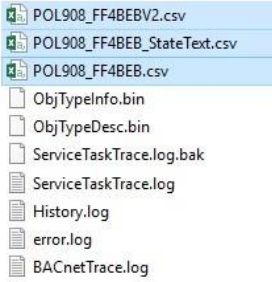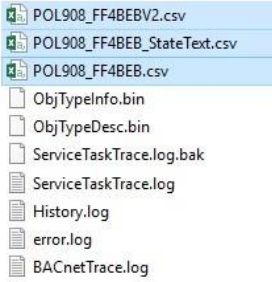
| Premise | The EDE files are created by the BACnet server each time the server is started. Download and import new files if s any change in controller configuration is done. Some BACnet objects could be no more available or new objects could be added. Also change in BACnet settings affect the new EDE file. | | | | | | | | | | | |
|--|---|--|------|--------|---|--|---|---|---|--|---|---|
| EDE file from BACnet IP module (POL908.00) | <p>EDE files from POL908 module can be exported via ftp as it follows:</p> <table border="1" data-bbox="472 515 1406 1294"> <thead> <tr> <th data-bbox="472 515 544 555">Step</th> <th data-bbox="544 515 1406 555">Action</th> </tr> </thead> <tbody> <tr> <td data-bbox="472 555 544 595">1</td> <td data-bbox="544 555 1406 595">Connect POL908 module to the controller via plug connection.</td> </tr> <tr> <td data-bbox="472 595 544 696">2</td> <td data-bbox="544 595 1406 696"> Connect to the POL908 TCP/IP port the bus cable from: <ul style="list-style-type: none"> • a LAN if DHCP of the module is set to ON • a PC with static IP address if DHCP of the module is set to OFF </td> </tr> <tr> <td data-bbox="472 696 544 846">3</td> <td data-bbox="544 696 1406 846"> Set proper IP address and Subnet mask of the module and apply changes. i.e. IP 192.168.1.45 Subnet mask 255.255.255.0 </td> </tr> <tr> <td data-bbox="472 846 544 1294">4</td> <td data-bbox="544 846 1406 1294"> Open a resource explorer instance and type the module IP address. i.e. ftp://192.168.1.45/Temp. In the folder “Temp” the EDE files in .csv format are available:  </td> </tr> </tbody> </table> | | Step | Action | 1 | Connect POL908 module to the controller via plug connection. | 2 | Connect to the POL908 TCP/IP port the bus cable from: <ul style="list-style-type: none"> • a LAN if DHCP of the module is set to ON • a PC with static IP address if DHCP of the module is set to OFF | 3 | Set proper IP address and Subnet mask of the module and apply changes. i.e. IP 192.168.1.45 Subnet mask 255.255.255.0 | 4 | Open a resource explorer instance and type the module IP address. i.e. ftp://192.168.1.45/Temp . In the folder “Temp” the EDE files in .csv format are available:  |
| Step | Action | | | | | | | | | | | |
| 1 | Connect POL908 module to the controller via plug connection. | | | | | | | | | | | |
| 2 | Connect to the POL908 TCP/IP port the bus cable from: <ul style="list-style-type: none"> • a LAN if DHCP of the module is set to ON • a PC with static IP address if DHCP of the module is set to OFF | | | | | | | | | | | |
| 3 | Set proper IP address and Subnet mask of the module and apply changes. i.e. IP 192.168.1.45 Subnet mask 255.255.255.0 | | | | | | | | | | | |
| 4 | Open a resource explorer instance and type the module IP address. i.e. ftp://192.168.1.45/Temp . In the folder “Temp” the EDE files in .csv format are available:  | | | | | | | | | | | |
| EDE file from both modules BACnet MS/TP (POL904.00) BACnet IP (POL908.00) | <table border="1" data-bbox="472 1328 1406 1608"> <thead> <tr> <th data-bbox="472 1328 544 1368">Step</th> <th data-bbox="544 1328 1406 1368">Action</th> </tr> </thead> <tbody> <tr> <td data-bbox="472 1368 544 1408">1</td> <td data-bbox="544 1368 1406 1408">Connect POL904/908 module to the controller via plug connection.</td> </tr> <tr> <td data-bbox="472 1408 544 1471">2</td> <td data-bbox="544 1408 1406 1471">Connect PC to POL904 by mean of a RS485-USB converter or to POL908 by mean of ethernet cable.</td> </tr> <tr> <td data-bbox="472 1471 544 1572">3</td> <td data-bbox="544 1471 1406 1572">A BACnet explorer tool is needed in order to access the module and export the EDE files from it. Freeware tools are available on the internet, i.e. YABE</td> </tr> <tr> <td data-bbox="472 1572 544 1608">4</td> <td data-bbox="544 1572 1406 1608">From YABE the EDE export option is available in functions menu.</td> </tr> </tbody> </table> | | Step | Action | 1 | Connect POL904/908 module to the controller via plug connection. | 2 | Connect PC to POL904 by mean of a RS485-USB converter or to POL908 by mean of ethernet cable. | 3 | A BACnet explorer tool is needed in order to access the module and export the EDE files from it. Freeware tools are available on the internet, i.e. YABE | 4 | From YABE the EDE export option is available in functions menu. |
| Step | Action | | | | | | | | | | | |
| 1 | Connect POL904/908 module to the controller via plug connection. | | | | | | | | | | | |
| 2 | Connect PC to POL904 by mean of a RS485-USB converter or to POL908 by mean of ethernet cable. | | | | | | | | | | | |
| 3 | A BACnet explorer tool is needed in order to access the module and export the EDE files from it. Freeware tools are available on the internet, i.e. YABE | | | | | | | | | | | |
| 4 | From YABE the EDE export option is available in functions menu. | | | | | | | | | | | |

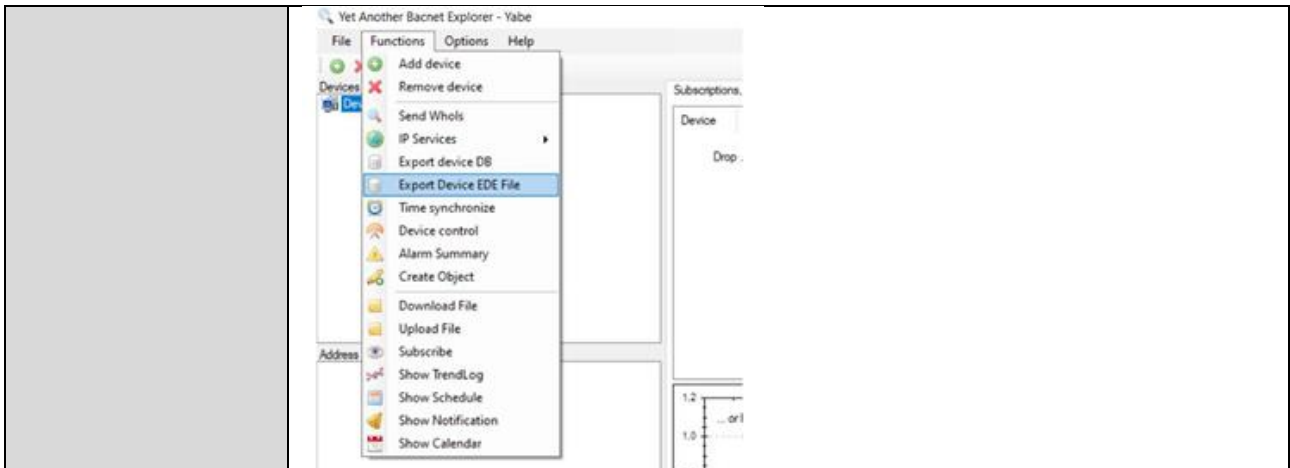



8. Annex 3 - Microtech III PICS for BACnet

4.4 BACnet standardized device profile

- BACnet Operator Workstation (B-OWS)
- BACnet Building Controller (B-BC)
- BACnet Advanced Application Controller (B-AAC)
- BACnet Application Specific Controller (B-ASC)
- BACnet Smart Sensor (B-SS)
- BACnet Smart Actuator (B-SA)

4.5 BACnet interoperability building blocks supported

| | | |
|--|--|---|
| Data Sharing | Data Sharing – ReadProperty-A Data Sharing – ReadProperty-B | DS-RP-A DS-RP-B |
| | Data Sharing – ReadPropertyMultiple-A Data Sharing – ReadPropertyMultiple-B | DS-RPM-A DS-RPM-B |
| | Data Sharing – WriteProperty-A Data Sharing – WriteProperty-B | DS-WP-A DS-WP-B |
| | Data Sharing – WritePropertyMultiple-B | DS-WPM-B |
| | Data Sharing – COV-B Data Sharing – COV-A | DS-COV-B DS-COV-A |
| | Alarm and event management | Alarm and Event – Notification Internal-B |
| Alarm and Event – AcknowledgeAlarm-B | | AE-ACK- B |
| Alarm and Event – Information-B | | AE-INFO-B |
| Alarm and Event – Alarm Summary-B | | AE-ASUM-B |
| Alarm and Event – Event-Enrollment Summary-B | | AE-ESUM-B |
| Scheduling | Scheduling – Internal B | SCHED-I-B |
| | Scheduling – External B | SCHED-E-B |
| Trending | Trending-Viewing and Modifying Trends Internal-B | T-VMT-I-B |
| | Trending-Automated Trend Retrieval-B | T-ATR-B |
| Device management | Device Management – Dynamic Device Binding-A | DM-DDB-A |
| | Device Management – Dynamic Device Binding-B | DM-DDB-B |
| | Device Management – Dynamic Object Binding-B | DM-DOB-B |
| | Device Management – DeviceCommunicationControl-B | DM-DCC-B |
| | Device Management – TimeSynchronization-B | DM-TS-B |
| | Device Management – UTCTimeSynchronization-B | DM-UTC-B |
| | Device Management – ReinitializeDevice-B | DM-RD-B |
| | Device Management – List Manipulation-B | DM-LM-B |
| | Device Management – Object Creation and Deletion-B | DM-OCD-B |
| Device Management – Backup and Restore-B | DM-BR-B | |
| Network management | Network Management-Connection Establishment-A | NM-CE-A |



4.6 BACnet standard object types supported

| Object type | Supported | Can be created dynamically | Can be deleted dynamically |
|--------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| Analog Input | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Analog Output | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Analog Value | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Binary Input | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Binary Output | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Binary Value | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Calendar | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Command | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Device | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Event Enrollment | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| File | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Group | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Loop | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Multi-State Input | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Multi-State Output | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Multi-State Value | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Notification Class | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Program | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Schedule | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Averaging | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Trend Log | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Life-Safety-Point | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Life-Safety-Zone | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Accumulator | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Pulse-Converter | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

4.7 BACnet standard object types description

Analog Input

| Property supported | Writable | Range restrictions |
|--------------------|----------|--------------------|
| Object_Identifier | | |
| Object_Name | | |
| Object_Type | | |
| Present_Value | X | |
| Description | | |
| Status_Flags | | |
| Event_State | | |
| Reliability | | |
| Out_Of_Service | X | |
| Units | | |
| Max_Pres_Value | | |
| Min_Pres_Value | | |
| Priority_Array | | |
| Relinquish_Default | X | |
| COV_Increment | X | 0 .. maxReal |
| Time_Delay | | |
| Notification_Class | | |



| | | |
|-------------------|---|---|
| High_Limit | X | Min_Pres_Value <= x <=Max_Pres_Value AndHigh_Limit > Low_Limit |
| Low_Limit | X | Min_Pres_Value <= x <=Max_Pres_Value AndHigh_Limit > Low_Limit |
| Deadband | X | 0 .. maxReal |
| Limit_Enable | X | |
| Event_Enable | X | |
| Acked_Transitions | | |
| Notify_Type | | |
| Event_Time_Stamps | | |

Analog Output

| Property supported | Writable | Range restrictions |
|--------------------|----------|---|
| Object_Identifier | | |
| Object_Name | | |
| Object_Type | | |
| Present_Value | X | |
| Description | | |
| Status_Flags | | |
| Event_State | | |
| Reliability | | |
| Out_Of_Service | X | |
| Units | | |
| Max_Pres_Value | | |
| Min_Pres_Value | | |
| Priority_Array | | |
| Relinquish_Default | X | |
| COV_Increment | X | 0 .. maxReal |
| Time_Delay | | |
| Notification_Class | | |
| High_Limit | X | Min_Pres_Value <= x <=Max_Pres_Value AndHigh_Limit > Low_Limit |
| Low_Limit | X | Min_Pres_Value <= x <=Max_Pres_Value AndHigh_Limit > Low_Limit |
| Deadband | X | 0 .. maxReal |
| Limit_Enable | X | |
| Event_Enable | X | |
| Acked_Transitions | | |
| Notify_Type | | |
| Event_Time_Stamps | | |



Analog Value

| Property supported | Writable | Range restrictions |
|--------------------|----------|---|
| Object_Identifier | | |
| Object_Name | | |
| Object_Type | | |
| Present_Value | X | Depends on the Unit |
| Description | | |
| Status_Flags | | |
| Event_State | | |
| Reliability | | |
| Out_Of_Service | X | |
| Units | | |
| Max_Pres_Value | | |
| Min_Pres_Value | | |
| Priority_Array | | |
| Relinquish_Default | X | |
| COV_Increment | X | 0 .. maxReal |
| Time_Delay | | |
| Notification_Class | | |
| High_Limit | X | Min_Pres_Value <= x <=Max_Pres_Value And High_Limit > Low_Limit |
| Low_Limit | X | Min_Pres_Value <= x <=Max_Pres_Value And High_Limit > Low_Limit |
| Deadband | X | 0 .. maxReal |
| Limit_Enable | X | |
| Event_Enable | X | |
| Acked_Transitions | | |
| Notify_Type | | |
| Event_Time_Stamps | | |

Analog Value (setpoints)

| Property supported | Writable | Range restrictions |
|--------------------|------------------|---------------------|
| Object_Identifier | | |
| Object_Name | | |
| Object_Type | | |
| Present_Value | X ⁽¹⁾ | Depends on the Unit |
| Units | | |
| Status_Flags | | |
| COV_Increment | X | 0 .. maxReal |
| Out_Of_Service | X ⁽¹⁾ | |
| Event_State | | |
| Inactive_Text | | |
| Active_Text | | |
| Polarity | X | |
| Notification_Class | | |
| Reliability | | |
| Acked_Transitions | | |



| | | |
|---------------------------|---|--------|
| Event_Enable | X | |
| Alarm_Value | X | |
| Notify_Type | | |
| Time_Delay | | |
| Event_Time_Stamps | | |
| Elapsed-active-time | X | Only 0 |
| Time-of-active-time-reset | | |

(1) Writable if Out_Of_Service=True

Binary Output

| Property supported | Writable | Range restrictions |
|---------------------------|----------|--------------------|
| Object_Identifier | | |
| Object_Name | | |
| Object_Type | | |
| Description | | |
| Present_Value | X | |
| Status_Flags | | |
| Out_Of_Service | X | |
| Event_State | | |
| Inactive_Text | | |
| Active_Text | | |
| Notification_Class | | |
| Reliability | | |
| Acked_Transitions | | |
| Event_Enable | X | |
| Notify_Type | | |
| Time_Delay | | |
| Event_Time_Stamps | | |
| Polarity | X | |
| Feedback_Value | | |
| Priority_Array | | |
| Relinquish_Default | X | |
| Elapsed-active-time | X | Only 0 |
| Time-of-active-time-reset | | |



The present publication is drawn up by of information only and does not constitute an offer binding upon Daikin Applied Europe S.p.A.. Daikin Applied Europe S.p.A. has compiled the content of this publication to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content, and the products and services presented therein. Specification are subject to change without prior notice. Refer to the data communicated at the time of the order. Daikin Applied Europe S.p.A. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this publication. All content is copyrighted by Daikin Applied Europe S.p.A..

DAIKIN APPLIED EUROPE S.p.A.

Via Piani di Santa Maria, 72 - 00072 Ariccia (Roma) - Italia

Tel: (+39) 06 93 73 11 - Fax: (+39) 06 93 74 014

<http://www.daikinapplied.eu>